


FIND the CODE!

Important information about your combination lock

Before you embark on a new treasure hunt, be sure to follow these steps when setting a numerical code:

1. The side of the lock that opens must be on the left, i.e. with the notches between the cogs pointing to the front.

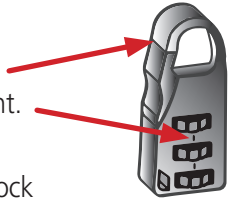

2. Enter the last number code stored in the combination lock by turning the thumbwheels
 - ▶ Before the first treasure hunt, enter the factory setting of 000
 - ▶ For a new treasure hunt, enter the code that you set for the last game or the factory setting if it was restored

3. Open the lock: **The shackle of the lock should now open quite easily. Then – and only then – proceed with the next step.**

(Rough handling of the lock may make it unusable.)



If the lock does not open, repeat Step 2. If necessary, try the number codes on page 39 of the rulebook.

4. Take the small play figure and place it on a flat surface
5. Lower the combination lock onto the small figure as shown so that the top of the head makes contact with the black button on the bottom of the lock.



6. **Apply pressure to the black button by pushing the lock down onto the figure.**

7. You can now turn the wheels of the lock to set the numerical code of the riddle card selected (See p. 39 of the rulebook).

8. Release the pressure on the black button by lifting the lock off the small wooden figure.

9. **Now, open the lock again and check that the code has been set correctly.**

If you have performed all of these steps in the correct order, a new numerical code will have been successfully stored in the lock. This is the procedure to follow before every new treasure hunt.

We recommend that you reset the code to 000 after each treasure hunt, or make a note of the last code entered into the combination lock. The best place to do this is on Page 39 of the instructions booklet.

Please also make sure that nobody accidentally or deliberately changes the number code stored in the lock (see also Step 3).